Gigaset

EN Dear Customer,

Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continued the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH.

We hope you enjoy your Gigaset.

DE Sehr geehrte Kundin, sehr geehrter Kunde,

die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführte. Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen.

Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.

FR Chère Cliente, Cher Client,

la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH.

Nous vous souhaitons beaucoup d'agrément avec votre Gigaset.

IT Gentile cliente,

la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH.

Le auguriamo tanta soddisfazione con il vostro Gigaset.

NL Geachte klant,

Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.

Wij wensen u veel plezier met uw Gigaset**.**

ES Estimado cliente,

la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH.

Le deseamos que disfrute con su Gigaset.

PT SCaros clientes,

Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH.

Desejamos que tenham bons momentos com o seu Gigaset.

DA Kære Kunde,

Gigaset Communications GmbH er retlig efterfølger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreførte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forstås som Gigaset Communications GmbHs forklaringer.

Vi håber, du får meget glæde af din Gigaset.

FI Arvoisa asiakkaamme,

Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yrityksen oikeudenomistaja, joka jatkoi puolestaan Siemens AG:n Gigaset-liiketoimintaa. Käyttöoppaissa mahdollisesti esiintyvät Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina.

Toivotamme Teille paljon iloa Gigaset-laitteestanne.

SV Kära kund,

Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH.

Vi önskar dig mycket nöje med din Gigaset.

NO Kjære kunde,

Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH.

Vi håper du får stor glede av din Gigaset-enhet.

EL Αγαπητή πελάτισσα, αγαπητέ πελάτη,

η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εμπορική δραστηριότητα Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης αποτελούν επομένως δηλώσεις της Gigaset Communications GmbH.

Σας ευχόμαστε καλή διασκέδαση με τη συσκευή σας Gigaset.

HR Poštovani korisnici,

Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH.

Nadamo se da sa zadovoljstvom koristite svoj Gigaset uređaj.

SL Spoštovani kupec!

Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH.

Želimo vam veliko užitkov ob uporabi naprave Gigaset.

Issued by
Gigaset Communications GmbH
Schlavenhorst 66, D-46395 Bocholt
Gigaset Communications GmbH is a trademark licensee of Siemens AG

© Gigaset Communications GmbH 2008
All rights reserved.
Subject to availability. Rights of modifications reserved.

www.gigaset.com

Gigaset

CS Vážení zákazníci,

společnost Gigaset Communications GmbH je právním nástupcem společnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), která dále přejala segment produktů Gigaset společnosti Siemens AG. Jakékoli prohlášení společnosti Siemens AG nebo SHC, které naleznete v uživatelských příručkách, je třeba považovat za prohlášení společnosti Gigaset Communications GmbH.

Doufáme, že jste s produkty Gigaset spokojeni.

SK Vážený zákazník,

Spoločnosť Gigaset Communications GmbH je právnym nástupcom spoločnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktorá zasa pokračovala v činnosti divízie Gigaset spoločnosti Siemens AG. Z tohto dôvodu je potrebné všetky vyhlásenia spoločnosti Siemens AG alebo SHC, ktoré sa nachádzajú v používateľských príručkách, chápať ako vyhlásenia spoločnosti Gigaset Communications GmbH.

Veríme, že budete so zariadením Gigaset spokojní.

RO Stimate client,

Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rândul său, a continuat activitatea companiei Gigaset a Siemens AG. Orice afirmaţii efectuate de Siemens AG sau SHC şi incluse în ghidurile de utilizare vor fi, prin urmare, considerate a aparţine Gigaset Communications GmbH.

Sperăm ca produsele Gigaset să fie la înălțimea dorințelor dvs.

SR Poštovani potrošaču,

Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu naći u korisničkim uputstvima treba tumačiti kao izjave kompanije Gigaset Communications GmbH.

Nadamo se da ćete uživati u korišćenju svog Gigaset uređaja.

BG Уважаеми потребители,

Gigaset Communications GmbH е правоприемникът на Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), която на свой ред продължи бизнеса на подразделението Siemens AG. По тази причина всякакви изложения, направени от Siemens AG или SHC, които се намират в ръководствата за потребителя, следва да се разбират като изложения на Gigaset Communications GmbH.

Надяваме се да ползвате с удоволствие вашия Gigaset.

HU Tisztelt Vásárló!

A Siemens Home and Communication Devices GmbH & Co. KG (SHC) törvényes jogutódja a Gigaset Communications GmbH, amely a Siemens AG Gigaset üzletágának utódja. Ebből következően a Siemens AG vagy az SHC felhasználói kézikönyveiben található bármely kijelentést a Gigaset Communications GmbH kijelentésének kell tekinteni.

Reméljük, megelégedéssel használja Gigaset készülékét.

PL Szanowny Kliencie,

Firma Gigaset Communications GmbH jest spadkobiercą prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), która z kolei przejęła segment produktów Gigaset od firmy Siemens AG. Wszelkie oświadczenia firm Siemens AG i SHC, które można znaleźć w instrukcjach obsługi, należy traktować jako oświadczenia firmy Gigaset Communications GmbH.

Życzymy wiele przyjemności z korzystania z produktów Gigaset.

TR Sayın Müşterimiz,

Gigaset Communications GmbH, Siemens AG'nin Gigaset işletmesini yürüten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kılavuzlarında bulunan ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapılmış bildiriler olarak algılanmalıdır.

Gigaset'ten memnun kalmanızı ümit ediyoruz.

RU Уважаемыи покупатель!

Компания Gigaset Communications GmbH является правопреемником компании Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), которая, в свою очередь, приняла подразделение Gigaset в свое управление от компании Siemens AG. Поэтому любые заявления, сделанные от имени компании Siemens AG или SHC и встречающиеся в руководствах пользователя, должны восприниматься как заявления компании Gigaset Communications GmbH.

Мы надеемся, что продукты Gigaset удовлетворяют вашим требованиям.

Issued by
Gigaset Communications GmbH
Schlavenhorst 66, D-46395 Bocholt
Gigaset Communications GmbH is a trademark licensee of Siemens AG

© Gigaset Communications GmbH 2008
All rights reserved.
Subject to availability. Rights of modifications reserved.

www.gigaset.com

SIEMENS

Gigaset S45

Gigaset

Issued by
Siemens Home and Office Communication Devices GmbH & Co. KG
Schlavenhorst 66
D-46395 Bocholt

© Siemens Home and Office Communication Devices GmbH & Co. KG 2007
All rights reserved. Subject to availability.
Rights of modification reserved.

www.siemens.com/gigaset

The handset at a glance

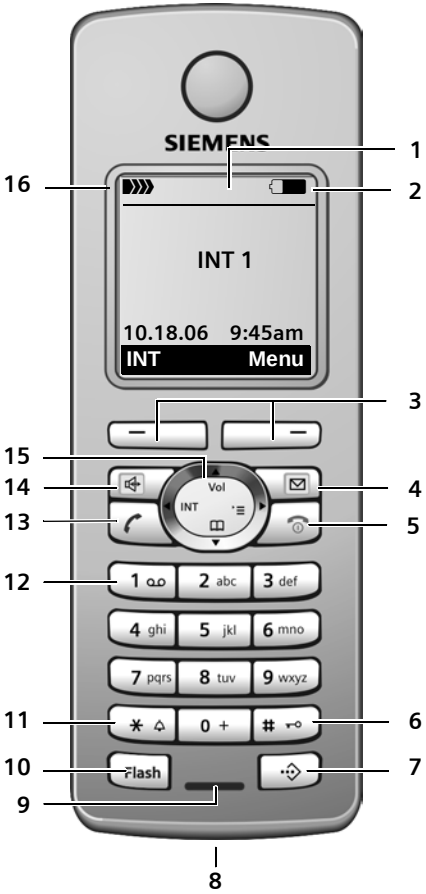

1 **Display** in idle status
2 **Charge status of the batteries**
(empty to full)
flashes: battery pack almost empty
flashes: batteries charging
3 **Display keys** (page 9)
4 **Message key**
Access to calls and message lists (depending on the base station);
Flashes: new message
5 **End call key, On/Off key**
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
6 **Pound (#) key**
Key lock on/off (press and hold in idle status)
Toggle between upper/lower case and digits
7 **Redial key**
Open last number redial list
8 **2.5 mm plug** for headset
9 **Microphone**
10 **Flash key**
- Confer (Flash)
- Insert a dialing pause (press and hold)
11 **Star key**
Ringtones on/off (press and hold)
Open table of special characters
12 **Key 1**
Select answer machine/network mailbox (press and hold)
13 **Talk key**
Answer a call, start dialing
14 **Handsfree key**
Switch between earpiece and handsfree mode
Lights up: handsfree activated
Key flashes: incoming call
15 **Control key** (page 8)
16 **Signal strength**
(high to low)
flashes: Out of Range

Contents

The handset at a glance 1

Safety precautions 3

Gigaset S45 – a handset with many extras 4

First Steps 4
Pack contents 4
Setting up the handset for use 4

Making calls 7
Making an external call 7
Ending a call 7
Answering a call 7
Handsfree operation 7
Hold 8
Making internal calls 8

Operating the handset 8
Switching the handset on/off 8
Activating/deactivating the keypad lock 8
Control key 8
Display keys 9
Returning to idle status 9
Menu guidance 9
Correcting incorrect entries 10

Using the directory and lists . . . 10
Directory 10
Last number redial list 12
Opening lists with the message key 12

Using a handset as a room monitor 13
Activating the room monitor and entering the number to be called . . . 13

Handset settings 14
Changing the display language 14
Setting the display 14
Setting the screen picture 14
Setting lighting 15
Activating/deactivating auto answer . 15
Adjusting the loudspeaker volume . . 15
Changing ringtones 16
Activating/deactivating advisory tones 16
Setting the alarm clock 17
Restoring the handset default settings 17

Appendix 18
Care 18
Contact with liquid 18
Questions and answers 18
Troubleshooting 18
Specifications 19
FCC 19
Industry Canada Certification 20
Safety precautions 20
Service (Customer Care) 22
End-user limited Warranty 22

Notes on the operating instructions 25
Symbols used 25
Example: menu input 25
Example: multiple line input 26
Writing and editing names 26

Accessories 28

Index 29

Safety precautions*) ⚠

Only use the power supply unit supplied as indicated on the underside of the device.

Only insert **approved rechargeable batteries of the same type**.
Never use ordinary (non-rechargeable) batteries as they may pose a health hazard or cause injury.

Make sure the rechargeable battery is inserted the right way round.

Use the battery specified in these operating instructions.

The phone may affect medical equipment so always switch your phone off before entering hospitals or doctors' practices.

The handset may cause an unpleasant humming noise in hearing aids.

Do not operate the phone in places where there is a risk of explosion (such as paint workshops).

Do not install the charging cradle in bathrooms or shower rooms. Handset and charging cradle are not splash-proof (page 18).

Drivers must not use the phone while driving.

The phone must be switched off at all times in an aircraft. Make sure it cannot be switched on accidentally.

If you give your Gigaset to someone else you should also give them the operating instructions.

Dispose of batteries and the phone carefully. Do not pollute the environment.

Emergency numbers cannot be dialed if the keypad lock is activated!

*) see also page 20

Gigaset S45 – a handset with many extras

Your Gigaset S45 not only lets you store up to 150 telephone numbers (page 10) – your Gigaset S45 can do much, much more:

- You can designate important people as VIPs so you can identify important calls from the "tone" (page 10).
- You can store anniversary dates (page 11) in your phone and it will remind you of them in advance.
- Select frequently used phone numbers at the press of a **single** key (page 11).
- Select 12 or 24-hour format for displaying the time (page 6).

Have fun using your new Gigaset S45!

First Steps

Pack contents

- one Gigaset S45 handset,
- one charging cradle (incl. power adapter),
- two batteries,
- one battery cover,
- one belt clip,
- one user guide.

Setting up the handset for use

Connecting up the charging cradle and mounting it on the wall (if required) is described at the end of these instructions.

Inserting the batteries

Caution:
Only use the rechargeable batteries recommended by Siemens (page 19)! This means: Never use conventional batteries (non-rechargeable) as this may cause significant damage to health and property. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. Use of battery packs not authorized by Siemens may void the warranty on this product.

- Fit the batteries with the correct polarity (see diagram).

The polarity is indicated in/on the battery compartment.

Closing the battery cover

- First align the battery cover with the notches on the clips on the inside of the housing.
- Then close the cover, press on the top so that it clicks into place.

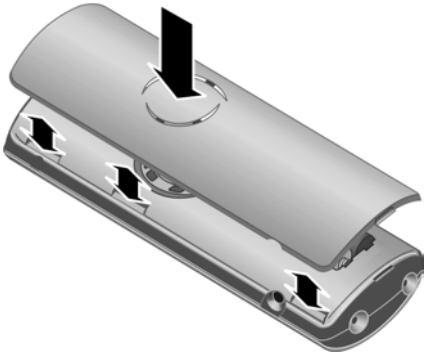

Attaching the belt clip

There are notches for attaching the belt clip on the side of the handset at the same height as the display.

- Press the belt clip onto the back of the handset so that the lugs on the belt clip click into the notches.

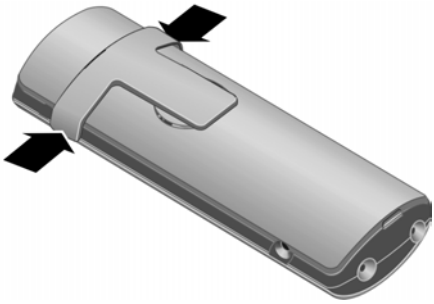

Opening the battery cover

- If fitted, remove the belt clip.
- Insert your hand into the headset socket cavity and pull the battery cover upwards.

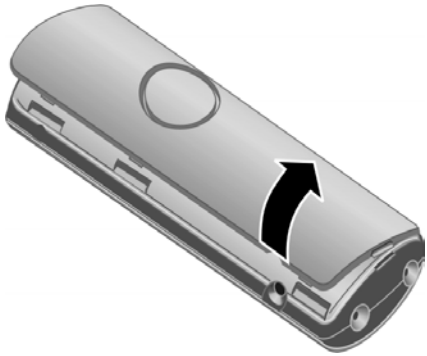

Registering your phone

Before you can use your Gigaset S45 you must register it to a base station. It can be registered to a maximum of four base stations. The actual registration procedure will depend on the type of base station.

Automatic registration Gigaset S45 to Gigaset S450/S455

Important: The handset must not yet be registered to any base station.

- Place the handset in the base with its **display facing outwards**.

Registration takes around 1 minute. During this process, Regstr.Procedure appears in the display and the name of the base station flashes, for example Base 1. When the handset has been registered, its screen displays its internal number, for example INT 2 for internal number 2. The handset is assigned the lowest available internal intercom number (1-6). If all internal numbers 1-6 have been assigned, number 6 is overwritten, provided the handset with the internal number 6 is in idle status.

Notes:

- Automatic registration is not possible when the base station on which you wish to register the handset is being used to make a call.
- Each key press interrupts the automatic registration.
- If automatic registration does not work, you will have to register the handset manually.

Manual registration Gigaset S45

If the handset does not switch on automatically when the batteries are fitted, you must first charge the batteries.

You must activate manual registration of the handset at both the handset and the base station.

After it has been registered, the handset returns to idle status. The handset's internal number is shown in the display, for example INT 1. If it is not, repeat the procedure.

1. On the handset

→ → Handset → Register H/Set

Select base station, for example Base 1, and press OK.

Enter the system PIN of the base station (the default is 0000) and press OK. The screen will display the number, for example Base 1.

2. On the base station

Within 60 secs. press and **hold** the registration/paging key on the base station (page 1) (approx. 3 secs.).

Headset socket

Which headsets are compatible?
The following headsets have been tested with the S45:

- Plantronics M40
- Plantronics MX100
- Plantronics MX150

Charging batteries

- Plug the power adapter of the charging cradle into an electrical outlet.
- Place the handset in the base with its display facing forward.

To charge the batteries, leave the handset in the charging cradle. If the handset is activated, the flashing battery icon in the top right of the display indicates that the batteries are charging. During handset operation, the battery icon indicates the charge status of the batteries (page 1).

Initial charging and discharging of batteries

The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.

- To do this, leave the handset in the charging cradle **continuously** for **ten** hours. Your handset need not be switched on for it to charge.
- Once the batteries are fully charged, remove the handset from the charging cradle and do not put it back again until the batteries are fully discharged.

Notes:

- The handset should only be placed in a base station or charging cradle that is designed for it.
- When the handset is in the cradle, it charges even if it is switched off.
- If the handset has switched itself off because the battery has no charge, and it is then placed in the chargingcradle, it will switch itself on automatically.
- After the first battery charge **and** discharge you may replace your handset in the charging cradle after every call.

Please remember:

- Always repeat the charging and discharging procedure if you remove the batteries from the handset and re-insert them.
- The batteries may feel warm as they are charging. This is normal.

Setting the date and time

To set the date and time, press the display key Time to open the input menu.

To change the time, open the input field via:

→ → Date/Time

- Change multiple line input:

Date:
Enter month, day and year in 6-digit format.

Time:
Enter hours and minutes with 4 digits, for example 0 + 7 pqrs 1 ␣ 5 jkl for 07:15 AM a.m.

Time mode:
Choose between 12 and 24-hour time format.

If you have selected the **12-hour** time format, use the display key am/pm to switch between am and pm.

Save Press the display key.

Changing the base station

If your handset is registered to more than one base station, you can set it to a particular base station or to the base station that has the best reception (Best Base).

→ → Handset → Select Base

Select one of the registered base stations or Best Base and press OK.

Making calls

Making an external call

External calls are calls using the public telephone network.

Enter the number and press the talk key.

Or:

Press **briefly** the talk key and then enter the number.

To cancel the dialing operation, press the end call key.

You are shown the duration of the call while the call is in progress.

> Note:
> Dialing using the directory (page 1, page 10) or last number redial list (page 12) saves time re-entering numbers and network provider access codes ("call-by-call numbers").

Ending a call

Press the end call key.

Answering a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key.

You can accept the call by:

- Pressing the talk key.
- Pressing the handsfree key.

If the handset is in the charging cradle and the Auto Answer function is activated (page 15), the call will be answered automatically when you lift the handset from the cradle.

Press the display key Silence to mute the ringer without answering the call. You can answer the call as long the call is displayed on the screen.

Handsfree operation

You can activate the speakerphone at any time to provide handsfree operation during a call.

Activating/deactivating handsfree

Activating while dialing

Enter the number and press the talk key.

- You should inform your caller before you use the handsfree function so that they know someone else is listening.

Switching between earpiece and handsfree mode

Press the handsfree key.

During a call and when listening to the answer machine (depending on the base station), switch handsfree on or off.

If you wish to place the handset in the charging cradle during a call:

- Press and hold the handsfree key while placing the handset in the base station. If the handsfree key does not light up, press the key again.

For how to adjust the volume, see page 15.

Hold

To place the other party on hold during an external call:

Press the control key on the left.

To remove the call from hold:

Press the display key to continue the conversation.

Note:
While the call is on hold, the other party hears a hold melody.

Making internal calls

Internal calls to other handsets registered on the same base station are free.

Calling a specific handset

Initiate internal call.

Enter the number of the handset.

Or:

Initiate internal call.

Select handset.

Press the talk key.

Calling all handsets ("group call")

Initiate internal call.

Press the star key. All handsets are called.

Ending a call

Press the end call key.

Operating the handset

Switching the handset on/off

Press and **hold** the end call key. You will hear the confirmation beep.

Activating/deactivating the keypad lock

Press and **hold** the pound key.

You will hear the confirmation beep. The icon appears in the display when the keypad lock is activated.

The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished.

Control key

In the following information the side of the control key (top, bottom, right, left) you have to press in each operating situation is shown in black (e.g. for "press the right of the control key").

The control key has a number of different functions:

When the handset is in idle status

Open the directory.

Open main menu.

Open list of handsets.

Set the ringtones on the handset (page 16).

In the main menu and in input fields

You can use the control key to move the cursor up, down, right or left.

In lists and submenus

- / — Scroll up/down line by line.
- Open submenu or confirm selection.
- Go back one menu level, or cancel.

During an external call

- Open the directory.
- Hold with simultaneous internal call.
- Adjust loudspeaker volume for earpiece and handsfree mode.

Display keys

The function of the display keys changes depending on the particular operating situation. Example:

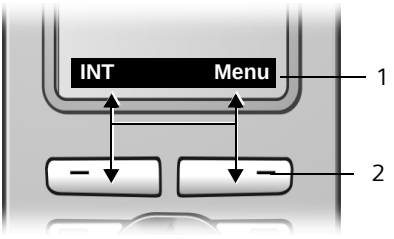

1 Current display key functions are shown in the bottom display line.
2 Display keys

Press the display key below to launch the function.

The most important display symbols are:

- Menu — Open the main menu.
- Options — Open a context-dependent menu.
- C — Delete key: backspace deletes one character at a time.
- Go back one menu level, or cancel.
- Copy number into directory.
- On bases with built-in answer machines: forward external call to the answer machine.
- Open the last number redial list (depending on the base station).

Returning to idle status

You can go back to idle status from anywhere in the menu as follows:

▶ Press and **hold** the end call key.

Or:

▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Changes that you have not confirmed or saved by pressing OK, Yes, Save, Send or Save Entry OK will be lost.

An example of the display in idle status is shown on page 1.

Menu guidance

Your telephone's functions are accessed using a menu that has a number of levels.

Main menu (first menu level)

▶ Press with the handset in idle status to open the main menu.

The main menu functions are shown in the display as a list with icon and name.

Accessing a function, i.e. opening the corresponding submenu (next menu level):

▶ Navigate to the function using the control key. Press the display key OK.

Submenus

The functions in the submenus are displayed as lists.

To access a function:

▶ Scroll to the function with the control key ⟨⟩ and press OK.

Or:

▶ Enter the corresponding digit combination.

A **short** press on the end call key ⟨⟩ returns you to the previous menu level / cancels the operation.

Correcting incorrect entries

You can correct incorrect characters in the text by navigating to the incorrect input using the control key. You can then:

- press C to delete the character to the left of the cursor,
- insert characters to the left of the cursor,
- overwrite the (flashing) character when entering the time and date etc.
- You will find examples of symbols used, menu entries and multiple line input in the appendix to this user guide, page 25.

Using the directory and lists

You can store a maximum of 150 entries in the directory (the actual number depends on the size of the individual entries).

You create the directory for your own individual handset. You can, however, send lists/entries to other handsets or the base station (page 11).

Directory

In the **directory**, you can store numbers and names associated with them.

▶ With the handset in idle status, open the directory by pressing the ⟨⟩ key.

Length of entries

Number: max. 32 digits
Name: max. 16 characters

Note:
For quick access to a number from the directory you can assign the number to a key.

Storing a number in the directory

⟨⟩ ➔ New Entry

▶ Change multiple line input:

Number:
Enter number.

Name:
Enter name.

Annivers.:
Enter anniversary if required (page 11).

Speed Dial:
Select key for quick dial.

▶ Save changes.

Selecting entries in the directory

⟨⟩ Open directory

You have the following options:

- Use ⟨⟩ to scroll through the entries until the required name is selected.
- Enter the first character of the name, or scroll to the entry with ⟨⟩ if required.

Dialing from the directory

⟨⟩ ➔ ⟨⟩ (select entry)

⟨⟩ Press the talk key. The number is dialed.

Managing entries in the directory

➜ (select entry)

Viewing an entry

View — Press the display key. The entry is displayed. Back with OK.

Editing entries

View Edit — Press display keys one after the other.

▸ Carry out changes and save.

Using other functions

➜ (select entry) ➜ Options (open menu)

The following functions can be selected with :

Display Number
Edit or add to a stored number. Then dial or call up further functions by pressing Options.

Edit Entry
Edit selected entry.

Delete Entry
Delete selected entry.

VIP Entry (directory only)
Mark a directory entry as **VIP** (Very Important Person) and assign it a particular ringtone. You can then identify VIP calls by their ringtones.

Requirement: Caller ID ("CIP")

Copy Entry
Send a single entry to a handset (page 11).

Delete List
Delete **all** entries in the directory.

Copy List (depending on the receiving handset)
Send complete list to a handset (page 11).

Available Memory
Display the available entries in the directory (page 10).

Using quick dial keys

▸ Press and **hold** the required quick dial key.

Sending the directory to another handset

Requirements:

- The sending and receiving handsets must both be registered to the same base station.
- The other handset and base station can send and receive directory entries. Please read the relevant user guide for further information.

➜ (select entry) ➜ Options (open menu) ➜ Copy Entry / Copy List

— Enter the internal number of the receiving handset. You see Copying entry.

Yes / No — Press the display key.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Please remember:

- Entries with identical numbers won't be overwritten on the receiving handset.
- The transfer will be canceled if the phone rings or if the memory of the receiving handset is full.

Storing anniversaries in the directory

You can store an anniversary for every number in the directory, and specify a time when you will receive a reminder call on the anniversary.

➜ (Select entry; page 10)

View Edit — Press display keys one after the other.

 — Scroll to the Annivers.: line.

Edit — Press the display key.

▸ Change multiple line input:

Date:
Enter the month/day in 4-digit format.

Time:
Enter the hour/minute for the reminder call in 4-digit format.

Prompt:
Select the type of signal for the reminder and press OK.

▶ Save changes (page 26).

Note:
Reminder calls require a time stamp. If you select a visual signal, then a time stamp is not required and is automatically set to 00.00.

Deleting anniversaries

(Select entry; page 10) → (Select entry; page 10)

View Edit — Press display keys one after the other.

Scroll to the Annivers.: line.

Edit Delete Save — Press display keys one after the other.

Reminder call on an anniversary

A reminder call is signaled on the handset using the selected ringtone.

OFF — Press the display key to stop the reminder call.

Last number redial list

The last number redial list contains the ten numbers last dialed with the handset (max. 32 numbers). If one of the numbers is in the directory, then the corresponding name will be displayed.

Manual last number redial

Press the key **briefly**.

Select entry.

Press the talk key.
The number is dialed.

When a name is displayed, you can display the corresponding phone number by pressing the display key View.

Managing entries in the last number redial list

Press the key **briefly**.

Select entry.

Options — Open the menu.

The following functions can be selected with :

Display Number (as in the directory, page 11)

Copy to Directory
Copy an entry to the directory (page 10)

Delete Entry (as in the directory, page 11)

Delete List (as in the directory, page 11)

Opening lists with the message key

The message key will illuminate after each missed call whether the caller left a voice mail message or not. An advisory tone sounds as soon as a **new entry** appears on a list. The key flashes (it will go off when the key is pressed). In idle status, the display shows an icon for the new message.

If you press the key, you access the lists which contain new messages.

Using a handset as a room monitor

If the room monitor is activated, a previously stored destination number is called as soon as a set noise level is reached. You can store an internal or external number in your handset as the destination number.

The room monitor call to an external number stops after approx. 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). While the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringtone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function **remains** activated.

If you switch off the handset, the room monitor mode is deactivated. You will need to reactivate the function after switching on the handset again.

Caution:
- **You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.**
- When the function is switched on the handset's operating time is severely reduced. If necessary, place the handset in the charging cradle. This ensures that the batteries do not run down.
- Ideally the handset should be positioned 1 to 2 meters away from the sound being monitored. The microphone must be directed towards the monitored sound.
- The connection to which the room monitor is diverted must not be blocked by an activated answer machine.

Activating the room monitor and entering the number to be called

→ → Room Monitor

▶ Change multiple line input:

Room M.:
Select On to activate.

Call to:
Press the display key Edit and enter destination number.

External number: select number from the directory or enter directly. Only **the last 4 digits** are displayed.

Internal number: delete any stored external number. INT (select handset or Call All, if all registered handsets are to be called) OK.

Save numbers with Save.

Level:
Set noise level sensitivity (Low or High).

▶ Save changes (page 26).

The function is now activated. With , you can move directly to settings.

Changing previously set external destination number

→ ★ → Room Monitor

Scroll to the Call to: line.

Edit Press the display key.

C Delete existing number.

- Enter number as described in "Activating the room monitor and entering the number to be called" (page 13).
- Save changes (page 26).

Changing previously set internal destination number

→ ★ → Room Monitor

Scroll to the Call to: line.

Edit Press the display key.

Yes Press the display key to confirm the prompt.

- Enter number as described in "Activating the room monitor and entering the number to be called" (page 13).
- Save changes (page 26).

Deactivating the room monitor remotely

Requirements: The phone must support touch tone dialing and the room monitor must be set to an external destination number.

- Take the call from the room monitor and press keys 9 #.

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. But the other room monitor settings on the handset (such as no ringtone) will remain activated until you press the display key OFF on the handset.

To reactivate the room function with the same phone number:

- Turn on the activation again and save with Save (page 13).

Handset settings

Changing the display language

You can view the display texts in different languages.

→ → Handset → Language

The current language is indicated by √.

Select a language and press OK.

Press and **hold** (idle status).

If you accidentally choose a language you do not understand:

5 jkl 4 ghi 1 ∞

Press display keys one after the other.

Select the correct language and press OK.

Setting the display

You have a choice of four color schemes and several different contrasts.

→ → Display

Color Scheme

Select and press OK.

Select a color scheme and press OK (√ = current color).

Press **briefly**.

Scroll to the Contrast line.

Contrast Select and press OK.

Select contrast.

Save Press the display key.

Press and **hold** (idle status).

Setting the screen picture

You can display a screen picture (picture or digital clock) when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screen picture is not displayed in certain situations, e.g. during a call or when the handset has been deregistered.

If a screen picture has been activated, the menu item Screen Saver is marked with ☑.

➜ ➜ Display ➜ Screen Saver

The current setting is displayed.

▶ Change multiple line input:

Activation:
Select On (screen picture is displayed) or Off (no screen picture).

Selection:
Change screen picture if necessary (see below).

▶ Save changes (page 26).

If the screen picture conceals the display, press the end call key briefly to show the idle display with time and date.

Changing the screen picture

➜ ➜ Display ➜ Screen Saver

Scroll to the Selection line.

View — Press the display key. The active screen picture is displayed

Select Picture/Clock.

Save — Press the display key.

▶ Save changes.

Setting lighting

Depending on whether or not the handset is in the charging cradle you can set different levels of lighting. If the charging cradle is switched on, the display is permanently dimmed.

➜ ➜ Display ➜ Backlight

The current setting is displayed.

▶ Change multiple line input:

In Charger
Select On or Off.

without Charger
Select On or Off.

Save — Press the display key.

Press and **hold** (idle status).

Note:
When the lighting is switched on, the standby time of the handset is reduced to approx. 30 hours.

Activating/deactivating auto answer

If you have activated this function, when you get a call you can simply lift the handset out of the charging cradle without having to press the talk key.

➜ ➜ Handset

Auto Answer
Select and press OK (☑ = on).

Press and **hold** (idle status).

Adjusting the loudspeaker volume

You can set the loudspeaker volume for handsfree talking to five different levels and the earpiece volume to three different levels. You can only make these adjustments during a call.

The handsfree volume can only be adjusted when this function is set.

You are conducting an external call.

Open menu.

Select volume.

Save — Press display key if necessary to save the setting permanently.

If is assigned a different function:

Options — Open menu.

Volume — Select and press OK.

Configure setting (see above).

Changing ringtones

- Volume:
  You can choose between five volumes (1–5; e.g. volume 2 = ▂▃□□□) and the "Crescendo" ring (6; volume increases with each ring = ▂▃▅▆▇).
- Ringtones:
  You can choose between 15 different melodies.

You can configure the following functions with different ringtones:

- Ext. Calls: For external calls
- Internal Calls: For internal calls
- All: The same for all functions

Settings for individual functions

Set the volume and melody depending on the type of signaling required.

◁▷ → ✉ → Audio Settings → Ringer Settings

◁▷ Setting, for example select Ext. Calls and press OK.

▸ Change multiple line input:

◁▷ Set volume (1–6).

◁▷ Scroll to the next line.

◁▷ Select melody.

Save Press the display key to confirm the prompt.

In idle status, you can also open the menu Ringer Settings by pressing ◁▷ **briefly**.

Settings for all functions to ring the same

◁▷ → ✉ → Audio Settings → Ringer Settings → All

▸ Set volume and ringtone (see "Settings for individual functions").

Yes Press the display key to confirm the prompt.

⌂ Press and **hold** (idle status).

Activating/deactivating the ringtone

Before answering a call or while your handset is in idle status, it is possible for you to cancel the ringtone permanently or for the current call. The ringtone cannot be re-activated while an external call is in progress.

Deactivating the ringtone permanently

*▵ Press the star key and hold until you can no longer hear the ringtone.

The 🔕 icon appears in the display.

Re-activating the ringtone

*▵ Press and **hold** the star key.

Deactivating the ringtone for the current call

Silence Press the display key.

Activating/deactivating the alert tone

In place of the ringtone you can activate an alert tone. When you get a call, you will hear **a short tone** ("Beep") instead of the ringtone.

*▵ Press and **hold** the star key and **within 3 seconds:**

Beep Press the display key. A call is now signaled by **one** brief alert tone. You will now see 🔔 in the display.

Activating/deactivating advisory tones

Your handset uses 'advisory tones' to tell you about different activities and statuses. The following advisory tones can be activated and deactivated independently of each other:

- **Key beep**: Each key press is acknowledged.

- **Acknowledge tones**:
  - **Confirmation tone** (rising tone sequence): at the end of the entry/setting and when a new entry arrives in the answer machine list (depending on base) or the calls list
  - **Error beep** (descending tone sequence): when you make an incorrect entry
  - **Menu end tone**: when scrolling at the end of a menu
- **Battery tone:** the batteries need to be charged.

→ → Audio Settings → Advisory Tones

▶ Change multiple line input:

Key Tones:
Select On or Off.

Confirm.:
Select On or Off.

Battery:
Select On, Off or In Call. The battery tone is activated/deactivated or only sounds during a call.

▶ Save changes (page 26).

You cannot deactivate the confirmation tone for placing the handset in the charging cradle.

Setting the alarm clock

Requirement: the date and time must have already been set (page 6).

Activating/deactivating the alarm clock and setting the wake-up time

→

▶ Change multiple line input:

Activation:
Select On or Off.

Time:
Enter the wake-up time in 4-digit format/**24 hrs mode**!

Melody:
Select melody.

Volume:
Set the volume (1-6).

▶ Save changes (page 26).

You will see the icon.

A wake-up call with the selected ringer melody is signaled on the handset. The wake up call sounds for 60 seconds. The display shows an Alarm Clock. If no key is pressed the wake-up call is repeated twice at five minute intervals and then switched off.

During a call, the wake-up call is signaled by a short tone.

Deactivating the wake-up call/ repeating after a pause (sleep mode)

Requirement: A wake-up call is sounding.

OFF — Press the display key. The wake-up call is deactivated.

Or:

Snooze — Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

Restoring the handset default settings

You can reset any individual settings and changes you have made. This will not affect entries in the directory or calls list, or the handset's registration to the base station.

→ → Handset → Reset Handset

Yes — Press the display key.

Cancel the restoring process by pressing or the display key No.

— Press and **hold** (idle status).

Appendix

Care

- Wipe the charging cradle and the handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Contact with liquid ⚠

If the handset has come into contact with liquid:

1. **Switch the handset off and remove the batteries immediately**.
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place f**or at least 72 hours** (**not** in a microwave, oven etc.).
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Questions and answers

If you have any queries about the use of your telephone, you can contact us at any time at www.siemens.com/gigasetcustomercare. The table below contains a list of common problems and possible solutions.

Troubleshooting

The display is blank.

1. The handset is not switched on.
   - Press and hold the end call key.
2. The batteries are empty.
   - Charge or replace the batteries (page 4).

The handset does not respond to a key press.

The keypad lock is activated.
- Press and **hold** the pound key (page 8).

"Base station x" is flashing **in the display.**

1. The handset is outside the range of the base station.
   - Reduce the distance between handset/ base station.
2. The handset has been de-registered.
   - Register the handset (page 5).

Base Search is flashing in the display.

Handset is set for Best Base and no base station is within range.
- Reduce the distance between handset/base station.

Handset does not ring.

The ringtone is switched off.
- Activate the ringtone (page 16).

The other party cannot hear you.

You have pressed the (INT) key. The handset is placed on hold.
- Switch on the microphone again (page 8).

You hear an error tone when keying an input (a descending sequence of tones).

Action has failed/invalid input.
- Repeat the operation.
  Watch the display and refer to the operating instructions if necessary.

Specifications

Recommended batteries

(Valid at the time of going to press)

Nickel-metal-hydride (NiMH):

- Sanyo Twicell 650
- Sanyo Twicell 700
- Panasonic 700mAh "for DECT"
- GP 700mAh
- Yuasa Technology AAA Phone 700
- Varta Phone Power AAA 700mAh
- GP 850 mAh

The handset is supplied with recommended batteries.

Handset operating times/charging times

Capacity	650 mAh
Standby time	approx. 170 hours (7 days)
Calling time	approx. 13 hours
Charging time	approx. 6 hours

The operating and charging times apply only when using the recommended batteries.

Note:
When the lighting is switched on, the standby time of the handset is reduced to approx. 30 hours.

General specifications

Handset dimensions	5.7 x 2 x 1.1inches (L × W × H)
Weight of handset with batteries	4.5 ounces

FCC

Warning: Changes or modifications to this unit not expressly approved by Siemens Cordless Products could void the FCC authority to operate the equipment. This includes the addition of any external antenna device.

If trouble is experienced with this equipment, for repair or warranty information, please contact Siemens Customer Care, Tel. 1-866 247 8758. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved. This equipment is of a type that is not intented be repaired by the Customer (user).

Privacy of communications may not be ensured when using this phone.

This telephone system equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's; to minimize or prevent such interference, the system base should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the base farther away from the TV or VCR will often reduce or eliminate the interference.

However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the base station and receiver.
3. Connect the base station into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio TV technician for help.

Notice to Hearing Aid Wearers:

This portable part is compatible with inductively coupled hearing aids.

Power Outage:

In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone that does not require electricity available for use during power outages.

Notice:

For body worn operation, the portable part (handset) has been tested and meets FCC RF exposure guidelines. Use with an accessory that contains metal parts may not ensure compliance with FCC RF exposure guidelines.

Industry Canada Certification

Operation is subject to the folowing two conditions (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain, protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together.

This precaution may be particularly important in rural areas

NOTE: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

This product meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all devices does not exceed five.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Safety precautions

Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock and injury to persons.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
5. Place this product securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register, or in a place where proper ventilation is not provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.

11. To reduce the risk of electric shock or burns, do not disassemble this product. Take it to a qualified service center when service is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
a.) When the power cord is damaged or frayed.
b.) If liquid has been spilled into the product.
c.) If the product has been exposed to rain or water.
d.) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
e.) If the product has been dropped or physically has been damaged.
f.) If the product exhibits a distinct change in performance.
13. Avoid using a telephone (other than a cordless type) during a thunderstorm. There may be a remote risk of electrical shock from lightning. Therefore we suggest a surge arrestor.
14. Do not use the telephone to report a gas leak in the vicinity of the leak.
15. Emergency/911 numbers may not be dialed if the keypad is locked.

BATTERY SAFETY PRECAUTIONS

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions.
CONTAINS ALKALINE NICKEL METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN MUNICIPAL WASTE.
1. Only use the batteries specified for use with this product.
2. DO NOT USE ALKALINE NICKEL CADMIUM OR ALKALINE LITHIUM BATTERIES, or mix batteries of different sizes or from different manufacturers in this product. DO NOT USE NONRECHARGEABLE BATTERIES.
3. Do not dispose of the batteries in a fire; the cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.
4. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
5. Exercise care in handling the batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.
6. Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the user's manual. Do not attempt to charge the batteries with any means other than that specified in the users manual.
7. Periodically clean the charge contacts on both the charger and handset.

Service (Customer Care)

Customer Care Warranty for Cordless Products
To obtain Siemens Customer Care Warranty service,
product operation information, or for problem resolution, call:
Toll Free: 1-866 247 8758
9:00 a.m. – 5:00 p.m. Monday-Saturday

www.siemens.com/gigasetcustomercare

End-user limited Warranty

This limited, non-transferable warranty is provided to the original buyer/end-consumer ("you") for systems, handsets and accessories (collectively, "Product") manufactured, sold and/or distributed by Siemens Home and Office Communication Devices LLC ("Siemens"). Siemens warrants to you that at the date of purchase, the product is free of defects in workmanship and materials and the software included in the Product will perform in substantial compliance to its program specifications.

1. WARRANTY PERIOD

The Product warranty period is one (1) year from the original date of purchase by you. Proof of purchase (e.g., sales slip or invoice) must be provided with any Product returned during the Warranty Period. Batteries supplied with the Products are warranted to be free from defects at the time of purchase only.

2. EXCLUSIVE REMEDY

Siemens' entire liability and your exclusive remedy if the Product is defective in materials or workmanship during the Warranty Period and is returned shall be that the Product will be repaired or replaced as set forth in Section 4 below. Reconditioned replacement components, parts or materials may be used in the replacement or repair. Data in the memory of the Product may be lost during repair.

3. THIS LIMITED WARRANTY DOES NOT COVER AND IS VOID WITH RESPECT TO THE FOLLOWING:

– Cosmetic damage, physical damage to the surface of the Product, including, without limitation, breakage, cracks, dents, scratches or adhesive marks on the LCD screen or outside casing of the Product.
– Products which have been repaired, maintained or modified (including the antenna) by anyone other than Siemens or a Siemens-approved repair facility, or that have been improperly installed.
– Cost of installation, removal or reinstallation.
– "Damage due to any telephone, electronic, hardware or software program, network, Internet or computer malfunctions, failures, or difficulties of any kind, including without limitation, server failure or incomplete, incorrect, garbled or delayed computer transmissions.
– Equipment and components not manufactured, supplied or authorized by Siemens.
– Modification of the Product's components, or operation of the Product in an unsuitable environment or in a manner for which it is not intended, including but not limited to failures or defects caused by misuse, abuse, accidents, physical damage, abnormal operation, improper handling or storage, neglect, alterations, unauthorized installation, removal or repairs, failure to follow instructions, problems caused by the carrier's network coverage, exposure to fire, water or excessive moisture or dampness, floods, or extreme changes in climate or temperature, acts of God, riots, acts of terrorism, spills of food or liquids, viruses or other software flaws introduced into the Product, or other acts which are not the fault of Siemens and which the Product is not specified to tolerate, including damage caused by mishandling or blown fuses.
– Products which have had warranty stickers, electronic serial number and/or serial number label removed, altered, rendered illegible or fraudulently applied to other equipment.

- Signal reception problems (unless caused by defect in material or workmanship in the Product).
- Products operated outside published maximum ratings.
- Performance of the Products when used in combination with other products or equipment not manufactured, supplied or authorized by Siemens.
- Consumables (such as batteries and fuses).
- Payments for labor or service to representatives or service centers not authorized to perform product maintenance by Siemens.
- Loss of data.
- Testing and examination discloses that the alleged defect or malfunction in the Product does not exist.

This warranty does not cover customer education, instruction, installation or removal, set up adjustments, problems related to service(s) provided by a carrier or other service provider, and/or signal reception problems. Siemens shall not be responsible for software, firmware, information, or memory data contained in, stored on, or integrated with any Products returned for repair, whether under warranty or not.

This warranty is valid only in the United States.

USE WITH ACCESSORIES NOT SUPPLIED BY SIEMENS OR NOT OTHERWISE EXPRESSLY AUTHORIZED BY SIEMENS MAY VOID WARRANTY.

4. WARRANTY CLAIM PROCEDURE

All warranty claims must be made by notifying Siemens prior to the expiration of the Warranty Period. Siemens' obligation to provide warranty support shall not extend past the end of the Warranty Period, except that any product repaired or replaced during the Warranty Period shall continue to be warranted for the balance of such Warranty Period or thirty (30) days, whichever is greater.

Throughout the Warranty Period, Siemens will be available to provide you with technical support service Monday through Saturday from 9:00 a.m. to 5:00 p.m. Central Time, excluding National holidays. Support service will be provided for you by accessing Siemens' toll free customer service number:

1-866-247-8758

5. LIMITATION OF WARRANTY

Siemens makes no warranty or representation that the software in the Products will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software will be uninterrupted or error free, or that all defects in the software products will be corrected.

6. LIMITATION ON REMEDIES; NO CONSEQUENTIAL OR OTHER DAMAGES

Your exclusive remedy for any breach of this Limited Warranty is as set forth above. Except for any refund elected by Siemens, **YOU ARE NOT ENTITLED TO ANY DAMAGES, INCLUDING BUT NOT LIMITED TO CONSEQUENTIAL DAMAGES**, if the Product does not meet the Limited Warranty, and, to the maximum extent allowed by applicable law, even if any remedy fails of its essential purpose. The terms below ("Exclusion of Incidental, Consequential and Certain Other Damages") are also incorporated into this Limited Warranty. Some states/jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Limited Warranty gives you specific legal rights. You may have others which vary from state/jurisdiction to state/jurisdiction.

7. DISCLAIMER OF WARRANTIES

SIEMENS AND ITS SUPPLIERS PROVIDE THE PRODUCT AND SUPPORT SERVICES (IF ANY) AS IS AND WITH ALL FAULTS. THE LIMITED WARRANTY IS IN LIEU OF ANY OTHER EXPRESS WARRANTIES (IF ANY) CREATED BY ANY DOCUMENTATION OR PACKAGING EXCEPT FOR THE LIMITED WARRANTY, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IS IN LIEU OF ANY IMPLIED OR STATUTORY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY OR COMPLETENESS OR RESPONSES, OF RESULTS, OF WORKMANLIKE EFFORT, OF LACK OF VIRUSES AND OF LACK OF NEGLIGENCE, ALL WITH REGARD TO THE PRODUCT, AND THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, QUIET POSSESSION, OR CORRESPONDENCE TO DESCRIPTION OR NON-INFRINGEMENT WITH REGARD TO THE PRODUCT. Some states or provinces do not allow limitations on how long an implied warranty lasts

or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you (applies only in the U.S. and Canada). If an implied warranty or condition is created by your state/province and federal or state/provincial law prohibits disclaimer of it, you also have an implied warranty or condition, BUT ONLY AS TO DEFECTS DISCOVERED DURING THE PERIOD OF THIS LIMITED WARRANTY (ONE YEAR). AS TO ANY DEFECTS DISCOVERED AFTER THE ONE YEAR PERIOD, THERE IS NO WARRANTY OR CONDITION OF ANY KIND. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state or from province to province (applies only in the U.S. and Canada). In no event shall Siemens' liability exceed the cost of repairing or replacing defective Products as provided herein, and any such liabilities will terminate upon expiration of the warranty period.

Any supplements or updates to the Product or the software in the Product, including without limitation, any (if any) software fixes or upgrades or bug fixes provided to you after the expiration of the one year Limited Warranty period are not covered by any warranty or condition, express, implied or statutory.

8. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL SIEMENS, SELLER OR THEIR SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS OR CONFIDENTIAL OR OTHER INFORMATION, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR FAILURE TO MEET ANY DUTY INCLUDING OF GOOD FAITH OR OF REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS LIMITED WARRANTY, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF SIEMENS OR SELLER OR ANY SUPPLIER, AND EVEN IF SIEMENS OR SELLER OR ANY SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY.

9. LIMITATION OF LIABILITY AND REMEDIES

NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED ABOVE AND ALL DIRECT OR GENERAL DAMAGES), THE ENTIRE LIABILITY OF SIEMENS, SELLER AND ANY OF THEIR SUPPLIERS UNDER ANY PROVISION OF THIS LIMITED WARRANTY AND YOUR EXCLUSIVE REMEDY FOR ALL OF THE FOREGOING (EXCEPT FOR ANY REMEDY OF REPAIR OR REPLACEMENT ELECTED BY SIEMENS OR SELLER OR SUPPLIER WITH RESPECT TO ANY BREACH OF THE LIMITED WARRANTY) SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT OR FIVE DOLLARS ($5.00 USD). THE FOREGOING LIMITATIONS, EXCLUSIONS AND DISCLAIMERS SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

10.GOVERNING LAW

This limited warranty will be governed by the laws of Texas, and excluding the United Nations Convention on Contracts for the International Sale of Goods.

If you want to learn more about Siemens Gigasets, or for technical assistance with your Gigaset, visit our web site at http://www.siemens.com or, please call (866) 247 8758, or for TDD access (888) 777-0209.

Issued by Siemens Cordless Products
Siemens and Gigaset are registered trademarks of Siemens Home and Office Communication Devices GmbH & Co. KG.
Siemens Cordless Products is a division of Siemens Home and Office Communication Devices GmbH & Co. KG.
Product attributes subject to change.
Siemens reserves the right, to make changes without notice in equipment design and/or components.
Part Number: A31008-M1754-R301-3-6019
© Copyright 2007 Siemens Home and Office Communication Devices GmbH & Co. KG. All rights reserved.

Notes on the operating instructions

This section explains the meaning of certain symbols and typographical conventions that are used in this user guide.

Symbols used

Copy Entry / Copy List (example)
Select one of the two menu functions specified.

Enter digits or letters.

Save
The display keys' current functions are shown reverse highlighted in the bottom display line.

Press the top or the bottom of the control key: scroll up or down.

Press the right or left of the control key: for example select setting.

/ / etc.
Press the corresponding key on the handset.

Example: menu input

In the user guides, the steps you need to perform are shown in abbreviated form. This is illustrated below using the example of "Contrast". The things you need to do are explained in the boxes.

→ → Display

- With the handset in idle status, press on the right of the control key to open the main menu.
- Select the icon using the control key – press the control key at the top or bottom.

In the display header, Settings is displayed.

- Press the display key OK to confirm the function Settings.

The Settings submenu is displayed.

- Press the bottom of the control key repeatedly until Display is selected.
- Press the display key OK to confirm the selection.

Contrast Select and press OK.

- Press the bottom of the control key repeatedly until Contrast is selected.
- Press the display key OK to confirm the selection.

Select contrast and press OK.

- Press right or left on the control key to select the contrast.
- Press the display key Save to confirm the selection.

Press and **hold** (idle status).

- Press and hold the end call key until the handset returns to idle status.

Example: multiple line input

There are many situations in which you can change the settings of a display or enter data in several lines.

In this user guide symbols are used to guide you step by step through multiple line input. This is illustrated below using the example of "Setting the date and time". The things you need to do are explained in the boxes.

To change the time, open the input field with:

→ → Date/Time

You will see the following display (example):

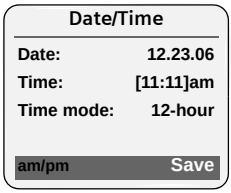

Date:

Enter month, day and year in 6-digit format.

The date in the first line is marked with [ ] to show it is active.

▸ Enter the date using the digit keys.

Time:

Enter hours/minutes in 4-digit format.

▸ Press the key.

The time in the second line is marked with [ ] to show it is active.

▸ Enter the date using the digit keys.

Time mode:

Select 12-hour or 24-hour time format.

▸ Press the key.

The time format is marked with [ ] to show it is active.

▸ Select time format.

▸ With 12-hour time format, use the display key am/pm to switch between am and pm.

▸ Save changes.

▸ Press the display key Save.

▸ Then press and **hold** the key.

The handset changes to idle status.

Writing and editing names

The following rules apply when creating an entry:

- Control the cursor with .
- Characters are added to the left of the cursor.
- Press the star key to show the table of special characters.
- Press and **hold** the pound key to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the pound key **before** entering the letter.
- The first letter of the name of directory entries is automatically capitalized, followed by lower case letters.

Entering special characters

You can call up the table of special characters using the * key. Select the required character and insert it with **Insert**.

Order of directory entries

Directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows:

1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get around the alphabetical ordering of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory. Names which you have preceded with an asterisk will move to the end of the directory.

Accessories

All accessories and batteries are available from the Siemens customer care website:

www.siemens.com/gigasetcustomercare

Only use original accessories. This will avoid possible health risks and damage, and also ensure that all relevant regulations are complied with.

Index

A

Accessories 28
Acknowledge tones 17
Activating
  advisory tones 16
  call acceptance 15
  handset 8
  keypad lock 8
  room monitor 13
Adjusting
  loud speaker volume 15
Advisory tones 16
Alarm clock
  setting 17
Alert tone 16
Anniversary 11
Answering a call 7
Auto answer 7, 15

B

Base station
  changing 7
Battery
  charging 1
  display 1
  fitting 4
  icon 1
  recommended batteries 19
  symbol 1
Battery icon 6
Battery pack
  charging 6
Battery tone 17
Best base station 7

C

Call
  ending 7
  external 7
  internal 8
Call acceptance 15
Call duration 7
Calls list 12
Canceling (operation) 9
Care, phone 18
Changing
  destination number 14
  display language 14
  ringtone 16
Charge status display 1, 6
Confirmation beep 17
Control key 1, 8
Correcting incorrect input 10
Customer Care 22

D

Deactivating
  handset 8
  keypad lock 8
Default settings
  handset 17, 18
Delete key 9
Deleting
  characters 10
Dialing pause
  entering 1
Digital clock 14
Directory 10
  managing entries 11
  opening 8, 9
  order of entries 27
  saving anniversary 11
  saving entry 10
  sending entry/list to handset 11
Display
  changing display language 14
  color skin/contrast 14
  display keys 1, 9
  in idle status 9
  lighting 15
  memory 11
  screen picture 14
  setting 14
  wrong language 14

E

Earpiece mode 7
Earpiece volume 15
End call key 1, 7
Ending a call 7
Entering special characters 27
Error beep 17
Example
  menu input 25
  multiple line entry 26

F

Fast access
  assigning key 1 1
Flash key. 1

G

Group call 8

H

Handset
  activating/deactivating 8
  advisory tones 16
  changing to best reception 7
  changing to different base station. . . 7
  contact with liquid 18
  display language 14
  hold 8
  idle status 9
  lighting 15
  list. 8, 9
  loudspeaker volume 15
  operating and charging times 19
  placing on hold 8
  registering 5
  registering on another base station 7
  restoring default settings 17
  screen picture 14
  using room monitor 13
Handset charging times 19
Handset operating time 19
  in room monitor mode 13
Handsfree
  key 1
Handsfree talking 7
Headset socket 6
Hearing aids 3
Hold 8
Hold melody 8

I

Icon
  alarm clock 17
  ringtone 16
Idle status (display) 9
Idle status, returning to 9
Incorrect input (correction) 10
Internal call. 8

K

Key 1 (fast access) 1
Key click. 16
Keypad lock 8
Keys
  assigning directory entry 10
  cancel key. 9
  control key 1, 8
  delete key 9
  display keys. 1, 9
  end call key. 1, 7
  fast access 1
  flash key 1
  handsfree key 1
  menu key 9
  message key 1
  On/Off key 1
  pound key. 1, 8
  quick dial 10
  redial key 1
  star key. 1, 16
  talk key. 1, 7

L

Language, display. 14
Last number redial list 12
Last number redial, manual 12
Lighting 15
Liquid 18
List
  handsets. 8, 9
Lock
  activating/deactivating keypad lock . 8
Loudspeaker volume. 15

M

Making calls
  answering a call 7
  external 7
  internal. 8
Manual last number redial 12
Medical equipment. 3
Memory
  directory. 11
Menu
  back one menu level 9
  end tone. 17
  key 9
  open. 8
Menu input 25

Message key 1
opening lists 12
Microphone 1
Multiple line entry 26

N

Number
as destination for room monitor . . . 13
saving in directory 10

O

On/Off key 1
Open
menu 8
Opening
directory 8, 9
Order of entries in directory 27

P

Pack contents 4
Phoning
internal 8
Placing the handset on hold 8
Pound key 1, 8
Power supply unit 3

Q

Quick dial 10, 11

R

Redial
key 1
Registering (handset) 5
Reminder call 12
Reset 17
Ringtone
changing 16
setting melody 16
setting volume 16
Room monitor 13
activating 13
entering destination number 13
sensitivity 13

S

Safety precautions 3
Screen picture 14
Searching in directory 10
Sending
directory entry to handset 11
Service (Customer Care) 22
Setting
alarm clock 17
date 6
display language 14
lighting 15
loud speaker volume 15
ringtone volume 16
screen picture 14
time 6
volume, melody 16
Setting melody 16
Setting the date 6
Setting the time 6
Settings, see Setting
Sleep mode 17
Sound
ringtone 16
Specifications 19
Star key 1, 16

T

Talk key 1, 7
Troubleshooting 18

V

VIP 11
Volume
earpiece 15
handset loudspeaker 15
loudspeaker 15
ringtone 16
setting 16

W

Warning beep, see Advisory tones
Writing, editing names 26